

work.

All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions: