

# POWERFLEX®

## PART NUMBER

# PFF1-806

## DESCRIPTION

## FRONT ANTI ROLL BAR TO LINK ROD BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes      1 x PTFE/Silicone Grease  
2 x Stainless Steel Sleeves    4 x Mild Steel Washers

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



### Fitting Instructions:

1. Undo the nut from the link rod and separate from the anti-roll bar.
2. Drill the swedged washers on the link rod and push the rubber out, as shown in Fig A.
3. Clean any dirt, corrosion and remove any sharp edges from the inside of the bracket. Push the bush into the bore.
4. Apply some of the supplied grease to the bore of the bush. Insert the stainless steel sleeve into the bore of the bush. (see fig. 2)
5. Use the supplied washer and re-fit the link rod back to the anti-roll bar. Tension all hardware to the manufacturers recommended torque settings.

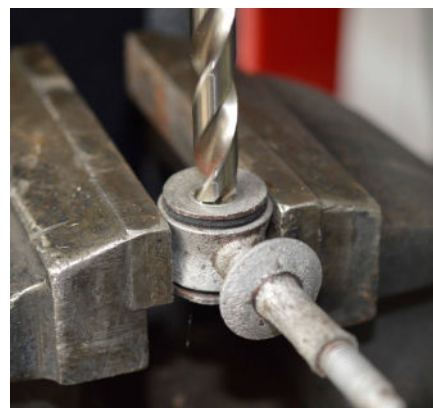


Figure 1



Figure 2