

# POWERFLEX®

## PART NUMBER

# PFF16-502

## DESCRIPTION

## FRONT ARM REAR BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes      1 x PTFE/Silicone Grease  
2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the original rubber bush from the arm and clean any dirt and corrosion from the bore in the arm, using a rounded file to remove any sharp edges.

**Tip: Apply some washing up liquid to the outside of the bush for an easier fitting.**

2. Press the polyurethane bush into the arm.

**Note: The thicker flange will be on top of the arm.**

**Tip: Insert the bush into the arm at an angle so that one part of the lip starts to push in first. With constant pressure the lip will drawer the rest of the bush through.**

3. Apply some of the supplied grease to the bore of the bush and insert the sleeve until flush.
4. Refit the arm back to the vehicle and tension all hardware to the manufacturer's recommended torque settings.

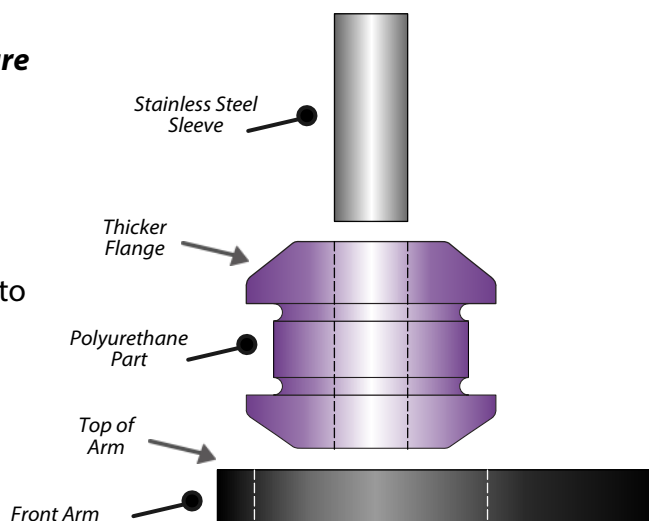


Figure 1