

# POWERFLEX®

## PART NUMBER

**PFF16-601**

## DESCRIPTION

**FRONT ARM FRONT BUSH**

## INSTALLATION GUIDE

### Contents (parts per pack):

4 x bushes (2xA, 2XB)

2 x metal sleeves

1 x grease

*Please read the complete fitting instructions and check package components before fitment.*

*These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

*- all work to be carried out by a licensed technician;*

*- all safety precautions adhered to;*

*- wheel alignment to be checked and adjusted as required after any suspension work.*

*All fasteners must be tensioned to manufacturer's torque settings.*



### Fitting Instructions:

1. Remove front control arm from the car and push out the original bush from the arm. Clean any dust and corrosion from the bore in the arm.
2. Push the new bush A (at the front of the arm, near the smooth face) and B (at the rear of the arm, near the cast face) as seen below in the Fig A.
3. Apply some of the supplied grease to the bore of the bush and insert the sleeve.
4. Refit the front control arm back onto the sub frame of the car. Fig B and tension all hardware to manufacturers recommended torque settings.

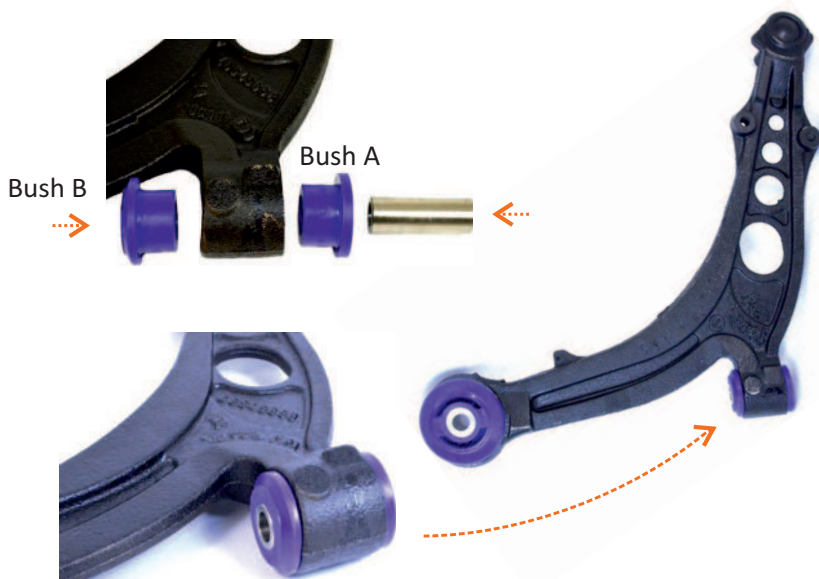


Fig. A



Fig. B