



PART NUMBER

**PFF19-1502G**

DESCRIPTION

**FRONT WISHBONE REAR BUSH-CASTER ADJUST**

### INSTALLATION GUIDE

#### Contents (parts per pack):

2 x Caster Adjustable Polyurethane Bush

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

#### Fitting Instructions:

1. Press the original rubber bush including outer shell from the front arm.
2. Clean any dirt and corrosion from the bore of the arm, and file off any sharp edges using a rounded file.
3. Using a press to ensure the wishbone and bush are square to each other, press the bush assembly into the arm from the underside of the arm. The radiused lip on the shell will match the profile of the arm and the adjustable sleeve head should be facing upwards when on the vehicle.

**WARNING: Do not press on the centre ball. Press on the outer edges of the metal outer shell only to avoid damaging the bush.**

4. For maximum caster adjustment, using a 27mm spanner, rotate the centre sleeve so that the offset hole is nearer to the inside of the car, as shown in Fig 1. This setting is recommended for improved steering feel, in-corner camber gain and sharper turn-in.

5. Check and rectify all other wheel alignment parameters, and tension all hardware to the manufacturer's recommended torque settings.

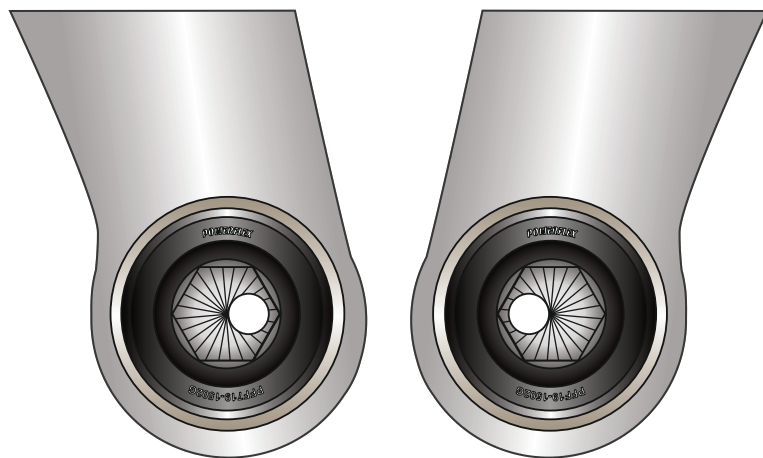


Figure 1

