

POWERFLEX®

PART NUMBER

PFF19-2226

DESCRIPTION

LOWER TORQUE MOUNT

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|-------------------------------|---|
| 2 x Large Polyurethane Bushes | 1 x Machined Anodised Aluminium Bracket |
| 1 x Small Polyurethane Bush | 1 x Nylon Washer |
| 1 x PFTE Grease | 1 x Stainless Steel Sleeve |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Raise the vehicle on either a lift or on axle stands to gain access to the underside and plastic engine under tray.
2. Remove the engine under tray to locate the Ford torque mount.
3. Undo the 16mm and 16mm bolts to remove the original torque mount.
4. Apply the grease provided to the bore of the Powerflex bushes and outer surface of the sleeves prior to installation.
5. Install the Powerflex torque mount in the same direction as the OE mount i.e. with the head of the large sleeve gearbox side.
6. Re-fit the 16mm & 16mm bolts, tightening them to Ford's recommended torque setting.
7. Re-fit the engine under tray using the retained plastics clips and torx screws.

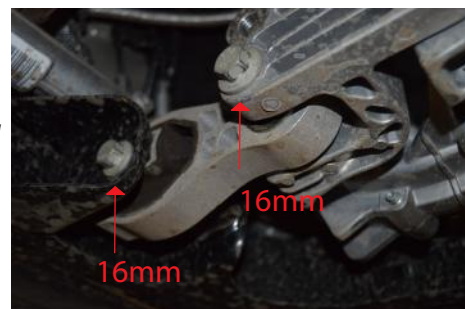


Figure 1



Figure 2

Figure 3 - Assembling the Powerflex Lower Torque Mount

