

# POWERFLEX®

## PART NUMBER

# PFF19-803

## DESCRIPTION

## FRONT WISHBONE LOWER REAR BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes    1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the front wishbone from the car.
2. Remove the original bush from the bore of the arm, ensuring to clean away any dirt or corrosion from the bore. If there are any sharp edges after removing the original bush, file them away before moving to the next step.
3. Lubricate and insert the new bush into the bore, with the chamfered edge going into the bore first, as shown in figure 1. Ensure that the bush sits flush within the bore.

**Note: Ensure the chamfered end of the bore is facing out of the bracket when inserted (see fig 1), as this chamfer is needed to allow the front wishbone arm to be fitted into the bush.**

4. Refit the arm and tension all hardware to the manufacturer's torque settings.

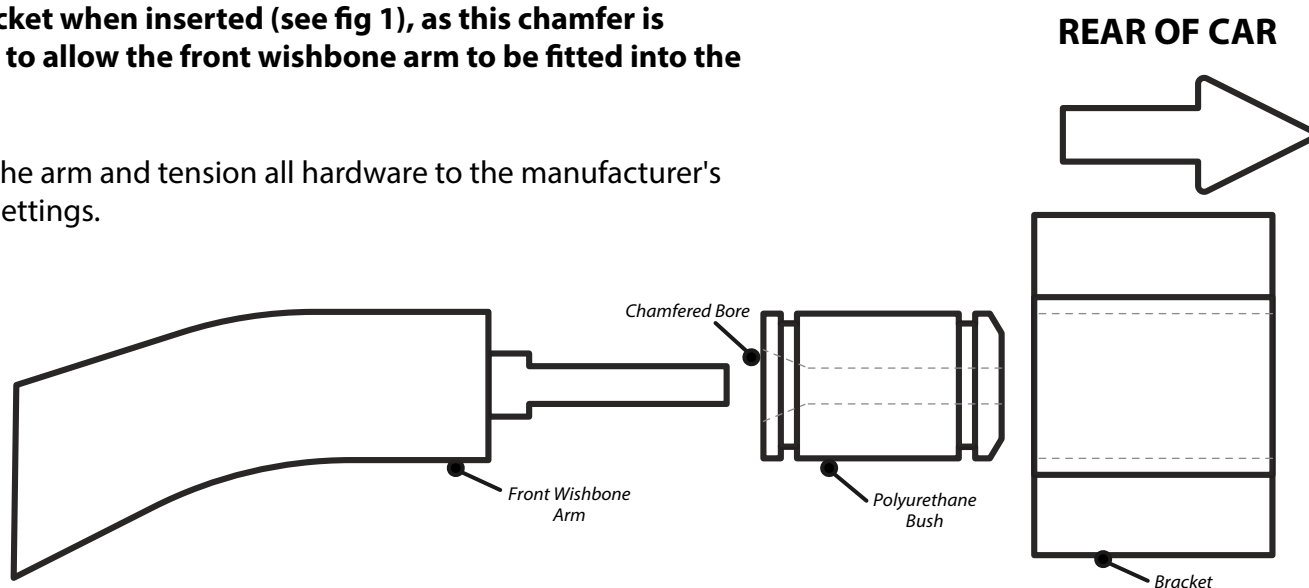


Figure 1