

POWERFLEX®

PART NUMBER

PFF25-1002

DESCRIPTION

FRONT ARM REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane A Bushes 1 x Grease

2 x Polyurethane B Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the front arm and then remove the bracket and original bushes from the arm.
2. Clean off any dirt or corrosion from the arm and around the spigot.
3. Push part A onto the spigot and make sure to push it with the lip facing towards the front of the car.
4. Push part B onto the metal bracket so that it sits snug inside.
5. Apply the supplied grease onto the bore of part B and around the shaft of part A.
6. Push part B and the metal bracket into part A until the back face of part A sits flush inside part B.
8. Refit the front arm back onto the vehicle and tension all hardware to manufacturers recommended torque settings.

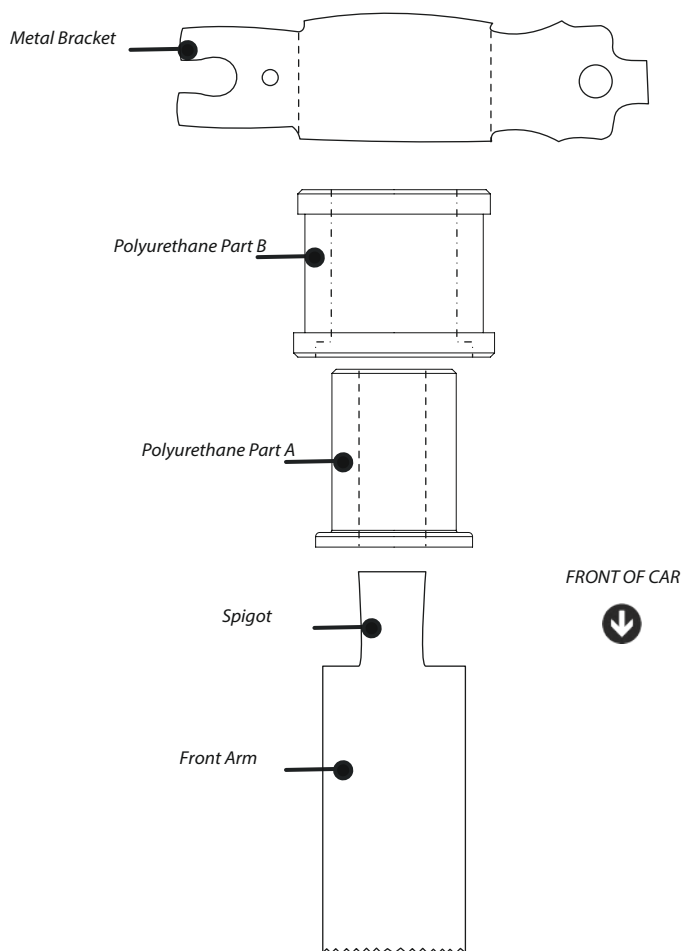


Figure 1 - diagram showing how the polyurethane parts will fit together in the front arm