

# POWERFLEX®

PART NUMBER

## PFF27-202

DESCRIPTION

### FRONT UPPER WISHBONE BUSH

#### INSTALLATION GUIDE

#### Contents (parts per pack):

- 8 x Polyurethane Bushes
- 4 x Stainless Steel Sleeves
- 8 x Zinc Plated Mild Steel Washers
- 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

#### Fitting Instructions:

1. Remove the original rubber bush from the front upper wishbone.
2. Clean any dirt or corrosion from the wishbone and file off any sharp edges.
3. Push the polyurethane part into the wishbone until the top hat section sits on the surface of the wishbone.
4. Push a second polyurethane part into the wishbone from the opposite side until the top hat section sits on the wishbone. There will be contact between the polyurethane parts inside the bore of the wishbone.
5. Apply some of the supplied grease to the bore of the polyurethane parts and insert the sleeve into the bore until it sits flush within the bush.
6. When refitting the wishbone, ensure that a washer is placed on both polyurethane parts, as shown in figure 1.
7. Tension all hardware to manufacturers recommended torque settings.

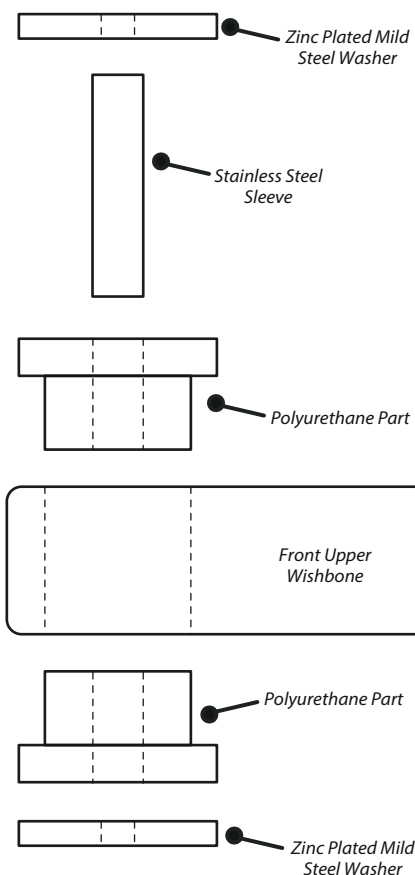


Figure 1