



PART NUMBER

**PFF3-1001**

DESCRIPTION

**FRONT WISHBONE FRONT BUSH**

**INSTALLATION GUIDE**

**Contents (parts per pack):**

- 4 x Polyurethane Bushes
- 1 x PTFE/Silicone Grease
- 2 x Stainless Steel Sleeves
- 4 x Zinc Plated Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



**Fitting Instructions:**

1. Remove the wishbone arm from the car and the original rubber bush from the wishbone arm.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Push a polyurethane part into the bore of the arm until it sits on the arm. Push another polyurethane part into the bore from the opposite direction, as shown in figure 1, until it sits on top of the arm.
4. Apply some of the supplied grease to the bore of the polyurethane parts and push in the stainless steel sleeve until it sits flush.
5. Place a steel washer on each end of the bush and refit the arm to car using the original nut and bolt.
6. Tension all hardware to manufacturers recommended torque settings.

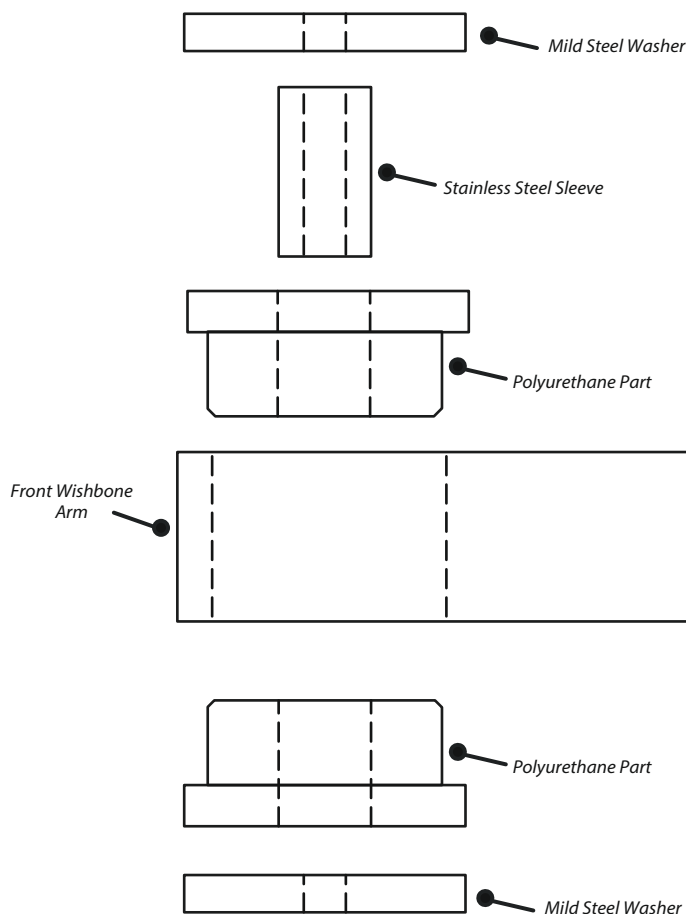


Figure 1