

POWERFLEX®

PART NUMBER

PFF3-1321

DESCRIPTION

LOWER TORQUE MOUNT SMALL BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane Bushes
- 1 x PTFE/Silicone Grease
- 1 x Stainless Steel Sleeves
- 1 x Outer Shell

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original rubber bush including its outer shell from the mount.
2. Clean any dirt and corrosion from the mount, removing any sharp edges or burrs using a rounded file.
3. Press the outer shell into the mount until it sits flush with both sides of the mount, see Fig 1.
4. Push the polyurethane bushes into either side of the mount.
5. Apply some of the supplied grease to the bore of the bush and insert the stainless steel sleeve.
6. Apply a small smear of grease to the outer faces of the bush before refitting the mount.
7. Refit the mount to the vehicle, tensioning all hardware to the manufacturer's recommended torque settings.

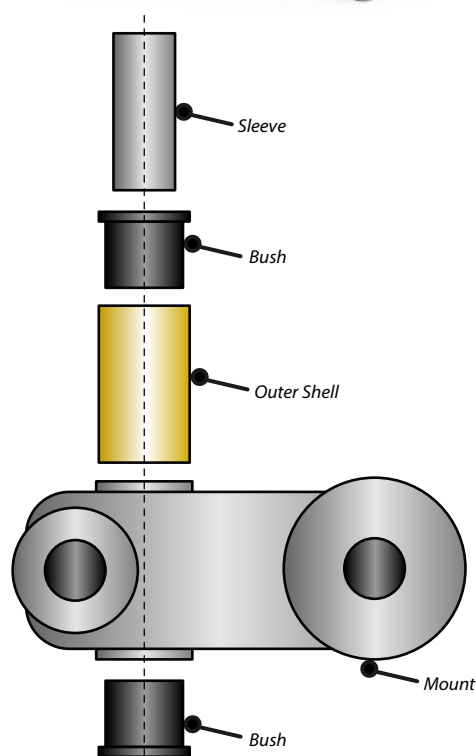


Figure 1



Figure 2