

POWERFLEX®

PART NUMBER

PFF3-610

DESCRIPTION

FRONT WISHBONE REAR BUSH - CAST ARM

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the original rubber bush from the arm, making sure the outer metal shell of the original bush is removed.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Push in the polyurethane part into the bore of the arm. Use a small amount of grease provided around the edges of the hole.
4. Apply some of the supplied grease into the bore of the polyurethane bush and insert the stainless steel sleeve into the bore of the bush so that it sits flush inside.
5. Refit the front wishbone back to the vehicle and tension all hardware to manufacturers recommended torque settings.



Figure 1

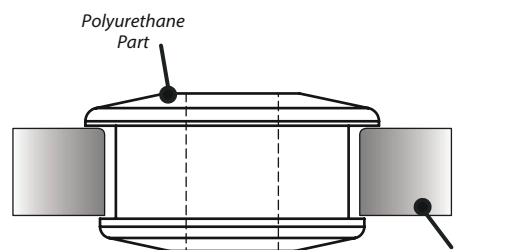


Figure 2