



PART NUMBER

**PFF3-726**

DESCRIPTION

**TRANSMISSION MOUNT INSERT**

### INSTALLATION GUIDE

#### Contents (parts per pack):

1 x Polyurethane Insert

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

#### Fitting Instructions:

1. Safely lift vehicle to allow access to underside of transmission mount.
2. Remove any covers or under-trays beneath transmission, and locate the transmission mount (Figure 1).
3. Remove the 2 screws from the lower transmission mount plate with a SP10 Spline bit and remove the plate (Figure 2)
4. Push Powerflex PFF3-726 into the voids beneath the plate (Figure 3).
5. Replace the plate and screws. Torque screws to 20 nm + 90 Degrees (Figure 4).
6. Replace any other parts and tighten all hardware to manufacturers recommended torque settings.



↑  
Front of car

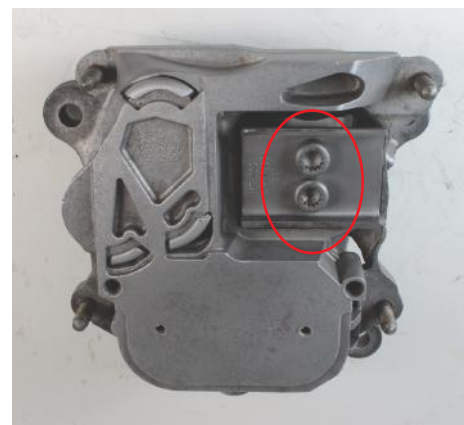


Figure 1: Locate mount plate and screws

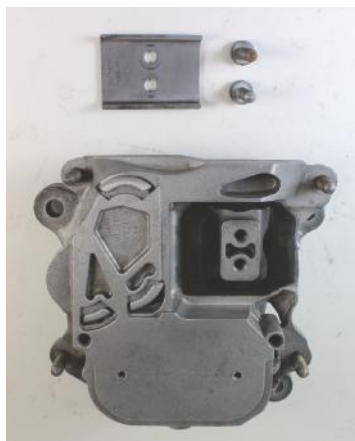


Figure 2: Remove mount plate and screws

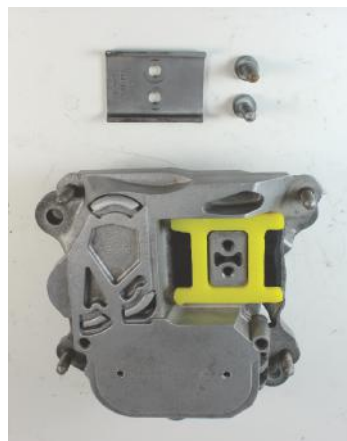


Figure 3: Insert PFF3-726

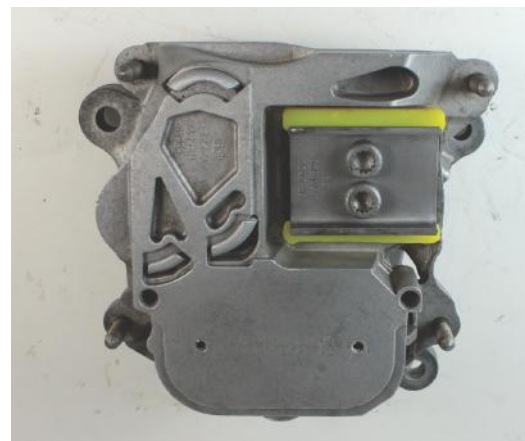


Figure 4: Replace mount plate and screws