

# POWERFLEX®

## PART NUMBER

# PFF32-402

## DESCRIPTION

### FRONT LOWER ARM REAR BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Stainless Steel Sleeves
- 4 x Polyurethane Inserts

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.


It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:


1. Remove original bush from the arm, clean any dirt and corrosion from the bore in the arm.
2. Push in the B bush (shorter) from the inside of the arm (from front of car), aligning the arrows on the bush with the arm. Push in the A bush (longer) from the outside of the arm (from rear of car), again aligning the arrows with the arm.
3. Apply some of the supplied grease to the bore of the bush and push the sleeve into the bush.
4. Refit the arm to the car and tension all hardware to manufacturers recommended torque settings. Wheel alignment will need to be adjusted.
5. To reduce the flexibility of the bush, fit the supplied polyurethane insert into the bushes.

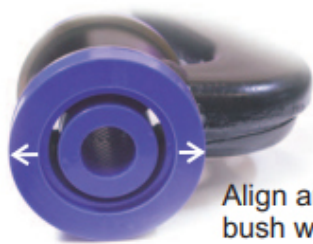

Align arrows on bush with arm



Fit insert (Optional)

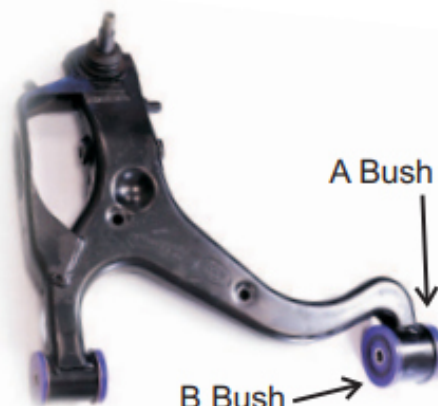

A Bush

B Bush