



**PART NUMBER**

**PFF32-407**

**DESCRIPTION**

**FRONT UPPER WISHBONE REAR BUSH**

**INSTALLATION GUIDE**

**Product description:**

This part replaces OE number: RBX500301 and fits into the rear position of the front upper wishbone. These bushes incorporate steel support washers that are designed to spread load across the arm and protect the bushes from sharp edges found on pressed steel arms fitted to Discovery 3 and 4 vehicles.

For cast arms found on Range Rover Sport (2005-2013) use PFF32-408.

**Contents (parts per pack):**

- 2 x Polyurethane A bushes
- 2 x Polyurethane B bushes
- 2 x Stainless steel sleeves
- 1 x Grease



*Please read the complete fitting instructions and check package components before fitment.*

*These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.


*All fasteners must be tensioned to manufacturer's torque settings.*

**Fitting Instructions:**

1. Remove the original rubber bushes from the rear position of the front upper wishbone, clean any dirt and corrosion from its bore.
2. Fit the polyurethane A bush into the rear bush position of the wishbone from the outside face of the wishbone and from the rear of the car.
3. Fit the polyurethane B bush into the rear bush position of the wishbone from the inside face of the wishbone and from the front of the car.
4. Apply some of the supplied grease to the bore of the bush and insert the sleeve into the bush.
5. Re-fit the wishbone to the car and tension all hardware to manufacturers recommended torque settings.



**PFF32-407A**

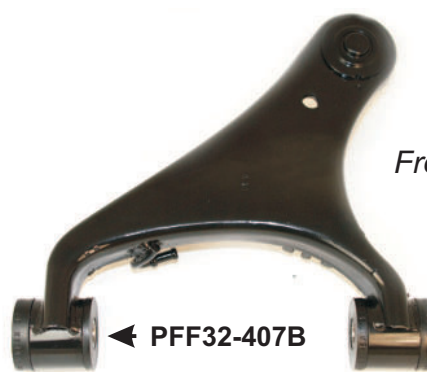

**PFF32-407B**

*Front of car*