

POWERFLEX®

PART NUMBER

PFF32-701

DESCRIPTION

FRONT WISHBONE FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|---|--------------------------|
| 2 x Polyurethane Bushes | 1 x PTFE/Silicone Grease |
| 2 x Stainless Steel Sleeves | 2 x Polyurethane Washers |
| 4 x Zinc Plated Mild Steel Outer Shells | |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original rubber bush from the front wishbone arm front position.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Press in both zinc plated mild steel outer shells into the bore of the front wishbone arm, with the lip face sitting against the arm, as shown in Figure 1.
4. Fit the polyurethane part into the outer shells, with the chamfered side being pushed in from the top of the arm.

Tip: apply some washing up liquid while fitting the polyurethane part for ease of fitting.

5. Apply some of the supplied grease into the bore of the polyurethane bush and insert the stainless steel sleeve into the bore of the bush so that it sits flush.
6. Apply some more of the supplied grease to the spigot, and carefully place the polyurethane washer over the spigot.
7. Refit the front wishbone arm back to the vehicle and tension all hardware to manufacturers recommended torque settings.

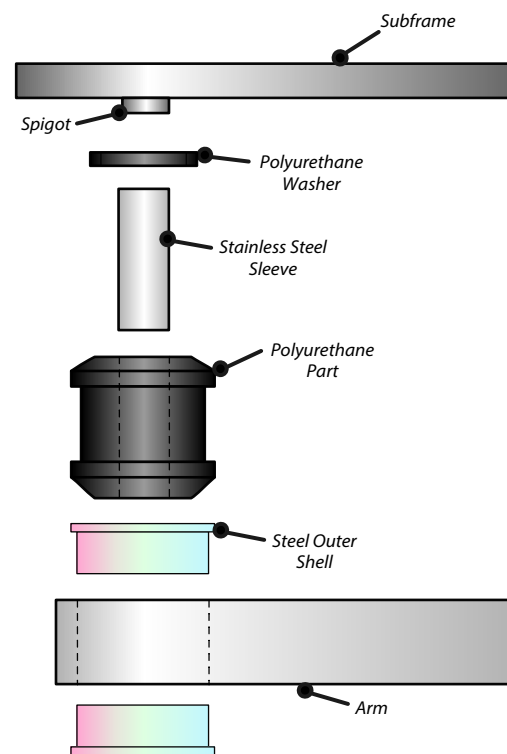


Figure 1



Figure 2