

### INSTALLATION GUIDE

#### **Contents (parts per pack):**

4x Bushes    4x Stainless steel sleeves    4x Nylon washers

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;
  - all safety precautions adhered to;
  - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.*



#### **Fitting Instructions:**

1. Remove the original bushes from the front upper arm. Fig A.
2. Clean any dirt or debris from the arm bores. Fig A.
3. Fit new bushes into the arm from the outside faces, with the larger diameter outwards, opposing each other. Fig B.
4. Apply some of the supplied grease into the bore of the bushes and push stainless steel sleeves into the bores. Fig B.
5. Fit supplied nylon washers on the outside face of the new bushes. Fig C.
6. Refit arm onto the car and tension all hardware to manufacturers recommended torque settings.

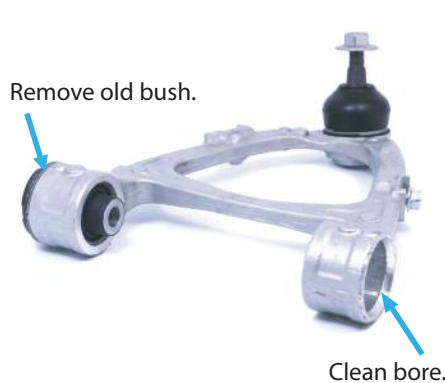


Fig A.

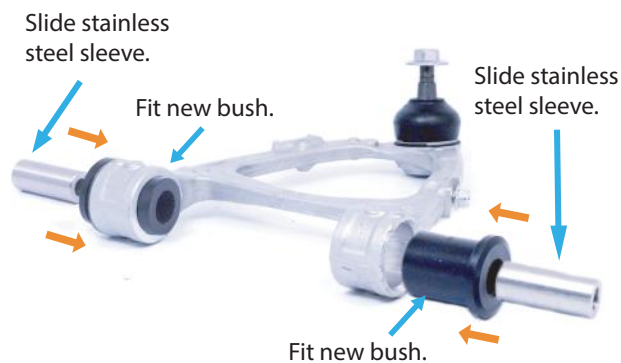


Fig B.



Fig C.