

POWERFLEX®

PART NUMBER

PFF46-219

DESCRIPTION

FRONT LOWER RADIUS ARM TO CHASSIS BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane A Bushes 1 x PTFE/Silicone Grease
2 x Stainless Steel Sleeves 4 x Zinc Plated Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tightened to manufacturer's torque settings.

Fitting Instructions:

1. Remove the front lower radius arm from the car.
2. Press the standard rubber bush from the radius arm.
3. Clean the bore of the arm and file away any sharp edges or burrs.
4. Using some soap or washing up liquid as a lubricant, press the polyurethane bush into the arm.
5. Apply a generous amount of the supplied grease to the knurled bore of the polyurethane bush.
6. Press the stainless steel sleeve into the bush.
7. Using any excess grease to hold them in place, stick a washer to each end of the bush.
8. Refit the arm to the vehicle, and tighten all hardware to manufacturer's recommended torque settings.

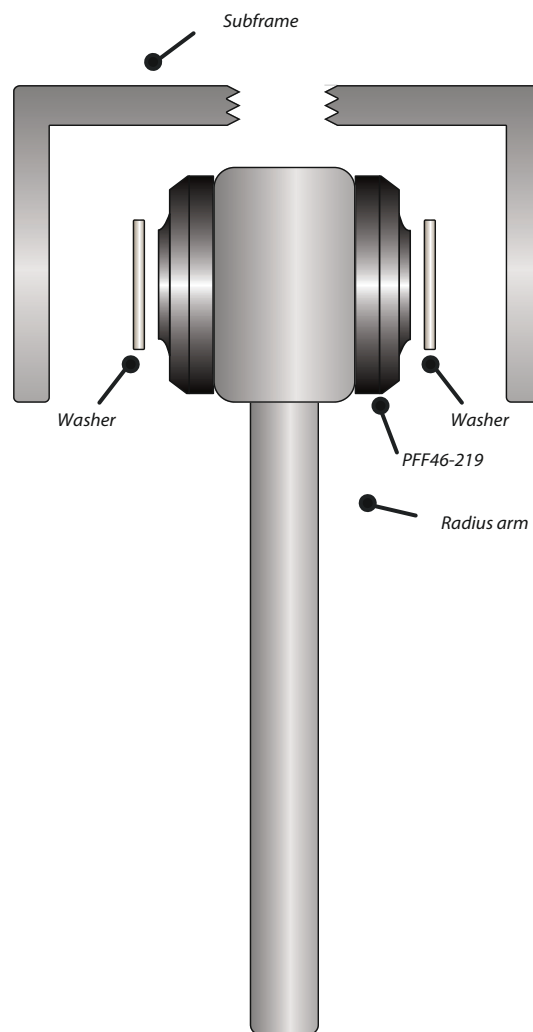


Figure 1: Assemble with washers