

POWERFLEX®

PART NUMBER

PFF5-124

DESCRIPTION

UPPER ENGINE MOUNT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

1 x Polyurethane A Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove mount and bracket from car.
2. Remove mount from bracket.
3. Secure mount in vice, so the top is accessible.
4. Slide PFF5-124 bush over one of the rubber flaps with the embossed square and logos facing downwards.
5. Using a screwdriver or lever bar, stretch the Polyurethane part over the other rubber flap.
6. Once the Polyurethane part is in place on the mount, fit it back onto the bracket and then back to the car, and ensure to tighten all hardware to manufacturers recommended torque settings.



Figure 1: Secure mount in vice



Figure 2: Fit bush with logos facing downwards



Figure 5: Seat the flaps on top of the bush securely

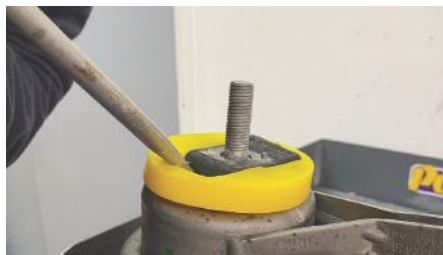


Figure 4: lever the bush around the other flap, and then lever the flap up on top of the bush



Figure 3: slide one side of bush under a rubber flap