

POWERFLEX®

PART NUMBER
PFF5-1301GFX

DESCRIPTION
**FRONT WISHBONE FRONT BUSH FIXED
OFFSET MOTORSPORTS GEOMETRY**

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Aluminium Shell 'A Part'
- 2 x Aluminium Shell 'B Part'
- 4 x Polyurethane Bushes
- 2 x Stainless Steel Sleeves
- 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove front wishbones from vehicle.
2. Remove front bushes from the wishbones, and clean the bore of the bush mounting, removing any sharp edges, debris and corrosion.
3. Fit the aluminium shells into the correct positions (Figure 1), using the locating pins to align the bushes and ensuring the etched arrow points towards the ball joint on the wishbone.
4. Push the polyurethane bushes into the shells from both ends.
5. Apply the supplied grease to the bore of the bushes, and insert the stainless steel sleeves into the bushes.
6. Refit the wishbones to the car, and tighten all hardware to manufacturers recommended torque settings.

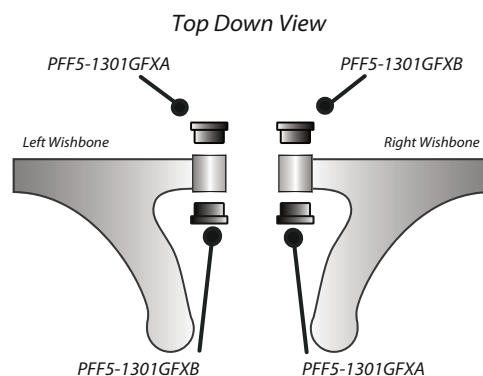


Figure 1: Shell locations

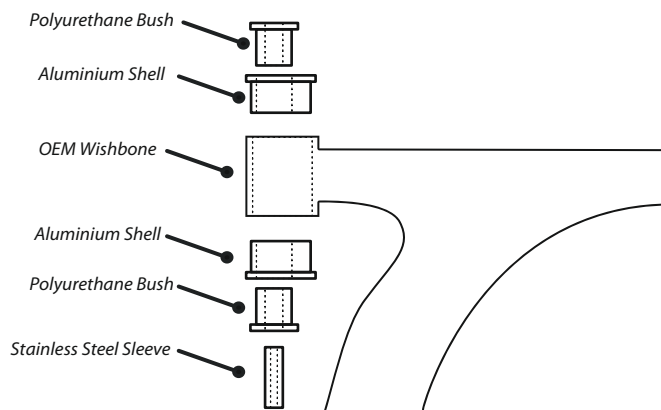


Figure 2: Bush Assembly locations