

# POWERFLEX®

## PART NUMBER

# PFF5-1430

## DESCRIPTION

### Front Strut Top Mount Guide Bushes

## INSTALLATION GUIDE

### Contents (parts per pack):

4 x Polyurethane A Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Jack up and support vehicle, remove road wheel and front suspension strut assembly.
2. Using spring compressors, tension the suspension spring and loosen and remove the top strut mount and surrounding components.
3. Remove any remaining parts of the old, foam guide bushes and clean the top mount surface.
4. Reassemble the top mount assembly with the Powerflex PFF5-1430 polyurethane guide bushes in the position shown in Figure 1. Make sure the recessed face of the bushes is facing towards the top-mount.
5. Tighten the top nut until the washers are tight against the metal sleeve inside the top-mount, and then ensure the nut is torqued to OEM specifications.
6. Refit the strut and wheel to the car, and ensure to tighten all hardware to manufacturers recommended torque settings.

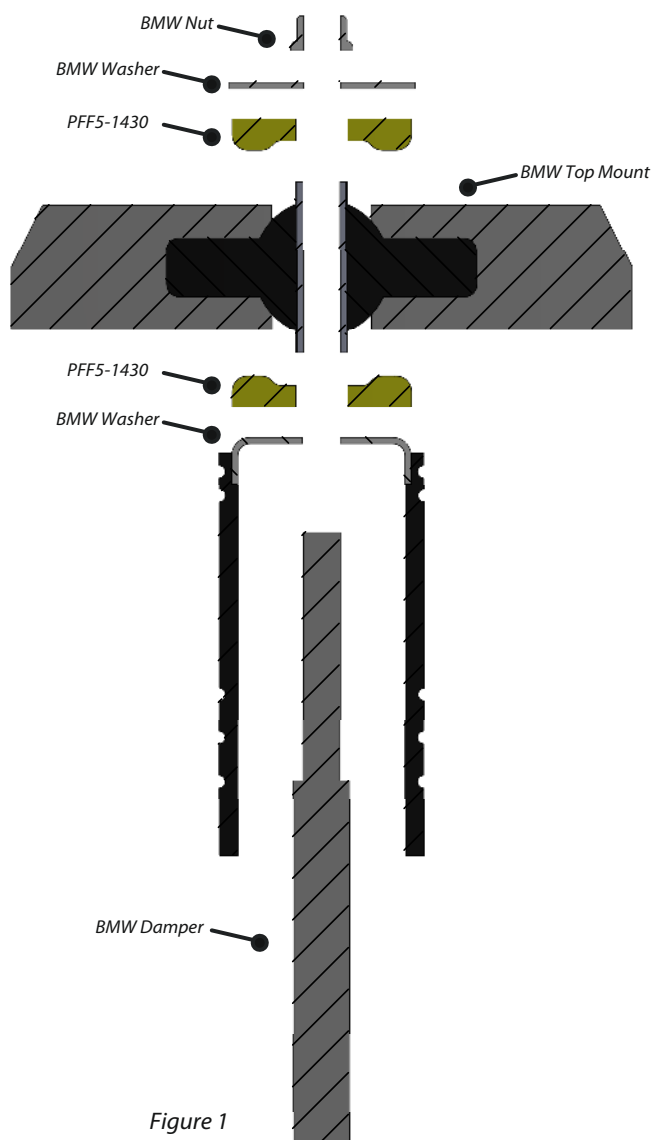


Figure 1