

POWERFLEX®

PART NUMBER

PFF5-1602

DESCRIPTION

FRONT ARM OUTER BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x A Polyurethane Bushes 2 x B Polyurethane Bushes
2 x Stainless Steel Sleeves 4 x Washers
1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the original bush including its outer shell from the arm as shown in Fig 1.
2. Clean any dirt and corrosion from the bore in the arm, removing any sharp edges or burrs with a rounded file.
3. Push the A bush into the arm facing towards the front of the vehicle as shown in Fig 2. The chamfered shape of the bush will fit the internal contour of the arm.
4. Push the B bush into the other side of the arm.
5. Apply some of the supplied grease to the bore of the bush and insert the sleeve until flush.
6. Prior to presenting the arm to the vehicle for re-assembly, add one of the supplied washers to the threaded end of the anti-roll bar.
7. Refit the arm to the vehicle, add the additional washer to the nut side of the bush and tension all hardware to the manufacturer's recommended torque settings.



Figure 1

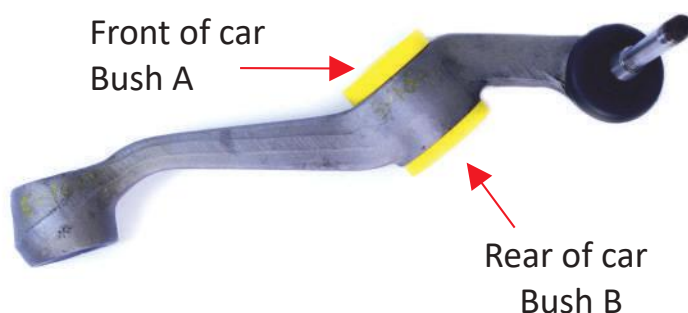


Figure 2



Figure 3