

POWERFLEX®

PART NUMBER

PFF5-2402

DESCRIPTION

FRONT CONTROL ARM TO CHASSIS BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 4 x Polyurethane Bushes
- 2 x Stainless Steel Sleeves
- 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original rubber bush from the front control arm, and make sure to remove the original metal shell from the bore of the arm otherwise the new polyurethane bush will not fit.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Push the polyurethane part into the bore of the arm so that the lip section sits on top of the arm. Push another polyurethane part into the bore from the opposite side as shown in figure 1.
4. Apply some of the supplied grease to the bore of the polyurethane part and insert the stainless steel sleeve, until it sits flush within the parts.
5. Tension all hardware to manufacturers recommended torque settings.

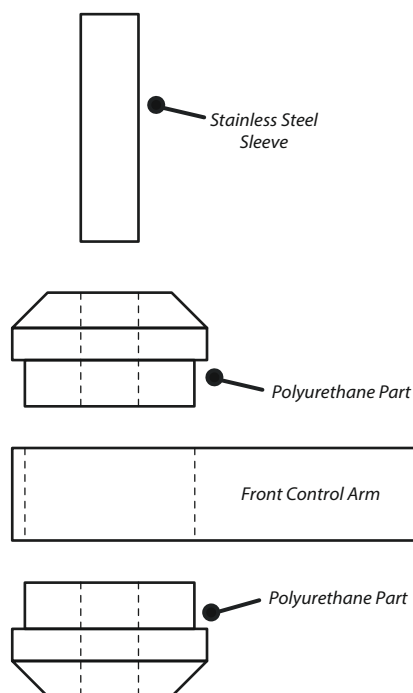


Figure 1