

# POWERFLEX®

PART NUMBER

## PFF5-4601

DESCRIPTION

### FRONT WISHBONE REAR BUSH

#### INSTALLATION GUIDE

#### Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



#### Fitting Instructions:

1. Remove the original rubber bush from the front wishbone arm. Make sure to retain the original bracket.
2. Clean any dirt and corrosion from the bore of the original bracket and file off any sharp edges. Clean the surface of the spigot on the arm.
3. Align polyurethane part A to the spigot on the arm, ensuring it is correctly aligned to match the spigot and the bush bore features, as shown in Figure 1 and push part A onto the spigot.
4. Push polyurethane part B into the original bracket, with the chamfered end being pushed in first so that it faces the rear of the vehicle.

**Tip: apply some washing up liquid to part B before fitting and push it in at a slight angle for ease of fitting.**

5. Apply some of the supplied grease into the bore of polyurethane part B and push the bracket assembly onto the spigot with part A attached to it, as shown in Figure 2.

6. Refit the bracket and arm to the vehicle and tension all hardware to manufacturers recommended torque settings.



**Correct Alignment**

Figure 1

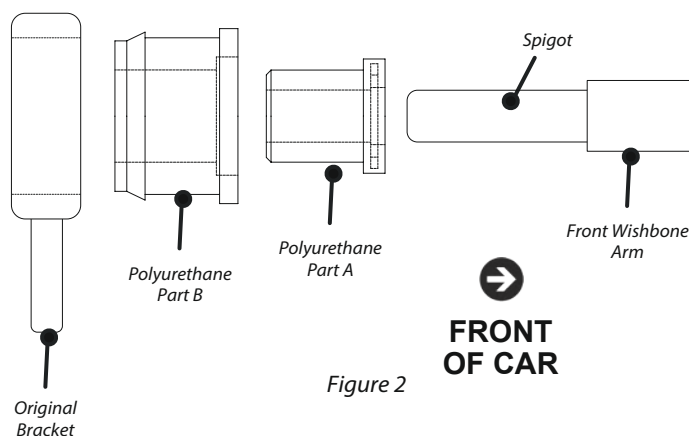


Figure 2

