

# POWERFLEX®

PART NUMBER

## PFF57-1621

DESCRIPTION

### TORQUE ROD BUSH

#### INSTALLATION GUIDE

#### Contents (parts per pack):

2 x Polyurethane Bushes      1 x PTFE/Silicone Grease

1 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

#### Fitting Instructions:

1. Remove the original rubber bush from the torque rod.
2. Clean any dirt and corrosion from the bore of the torque rod and file off any sharp edges.
3. Push in both polyurethane bushes into the mount, ensuring to follow the direction engraved on the bush, as shown in Figure 2.

**Noted: ensure to line up both bushes with the arrow engraved on the bush pointing towards the arm.**

4. Apply some grease into the bore of the polyurethane bush and push in the stainless steel sleeve so that it sits flush inside the bush.

5. Refit the torque rod back to the vehicle and tension all hardware to manufacturers recommended torque settings.

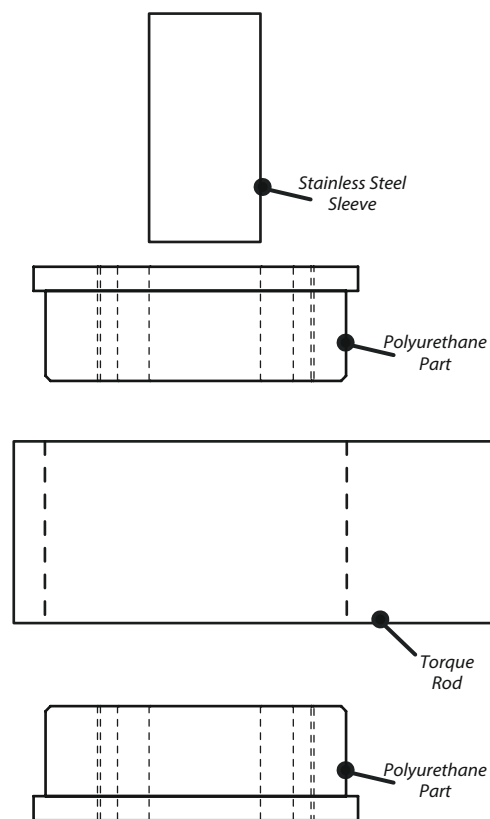


Figure 1

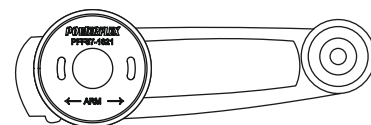


Figure 2