



PART NUMBER
PFF57-303

DESCRIPTION
FRONT ARM REAR BUSH

INSTALLATION GUIDE


Product description:

PFF57-303 - FRONT ARM REAR BUSH

This bush is designed to replace the standard rubber bush at the rear of the lower front arm. It is of a low compliance, freely rotating design.

Contents (parts per pack):

- 2 x bushes
- 2 x metal sleeves
- 2 x metal washers
- 2 x nylon washers
- 1 x grease

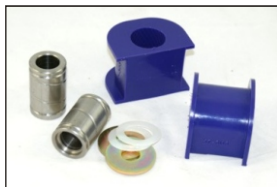

Please read the complete fitting instructions and check package components before fitment.

These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licenced technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*

All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove front lower suspension arm rear bush from the car.
2. Remove the rubber from the metal bracket which needs to be reused.
3. Fit the bush PFF57-303 into the original metal bracket.
4. Apply grease supplied to the bore of the bush and to the outside of the stainless steel sleeve. Push the sleeve into the bush.
5. Place the nylon washer onto the stud at the back of the arm. Slide the bush on to the stud counter bored end of the sleeve first. Place the supplied metal washer on to the stud after the bush, re fit the nut.
6. Refit the bush back onto the car, tighten fastenings to manufactures torque settings. Carry out wheel alignment checks.