

# POWERFLEX®

## PART NUMBER

# PFF5K-4601

## DESCRIPTION

## FRONT WISHBONE REAR BUSH AND BRACKET

## INSTALLATION GUIDE

### Contents (parts per pack):

- 2 x Polyurethane A Bushes    1 x Left Bracket
- 2 x B Polyurethane B Bushes    1 x Right Bracket
- 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the undertray and chassis brace (if fitted) from the vehicle to gain access to the wishbones.
2. Leaving the wishbone fitted to the vehicle, remove the original bush and bracket from the wishbone using either a bush puller or by knocking and cutting the original rubber bush off the arm.
3. Clean any old rubber or dirt from the hexagonal end of the wishbone.
4. Remove the inner A Bush from the supplied bush/bracket and apply some of the supplied grease to the outside of the A Bush and inside of the B Bush. See Fig 2.
5. Refit the inner A Bush to the bracket. This may require a small amount of pressure, or a tap with a soft hammer to get it to pop back into the outer B Bush.
6. Fit the bush/bracket assembly to the wishbone ensuring the washer bonded into the inner A Bush is aligned correctly with the widest point of the hex on the wishbone. See Fig 3.
7. Tension all hardware to the manufacturers recommended torque settings and refit the chassis brace and undertray.



Figure 1

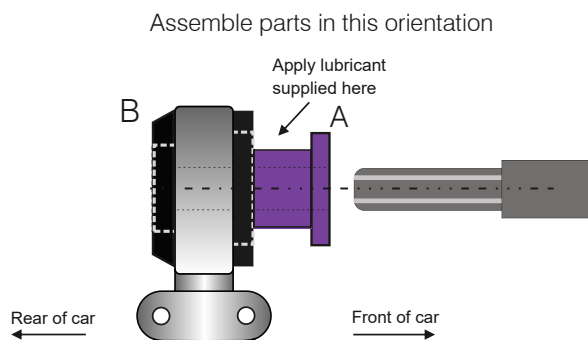


Figure 2

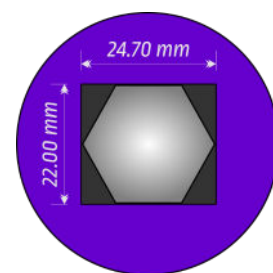


Figure 3