

POWERFLEX®

PART NUMBER

PFF60-603

DESCRIPTION

FRONT LOWER WISHBONE REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Aluminium Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original bush from the arm, but retain the outer shell.
2. Remember to clean away any dirt and corrosion.
3. Apply some of the powerflex grease to the bushes and push them in where the original bushes were.
4. Apply some of the powerflex grease to the aluminium sleeves and insert them into the polyurethane bushes.
5. Re-fit arm to the vehicle and tension all hardware to manufacturers recommended torque settings.

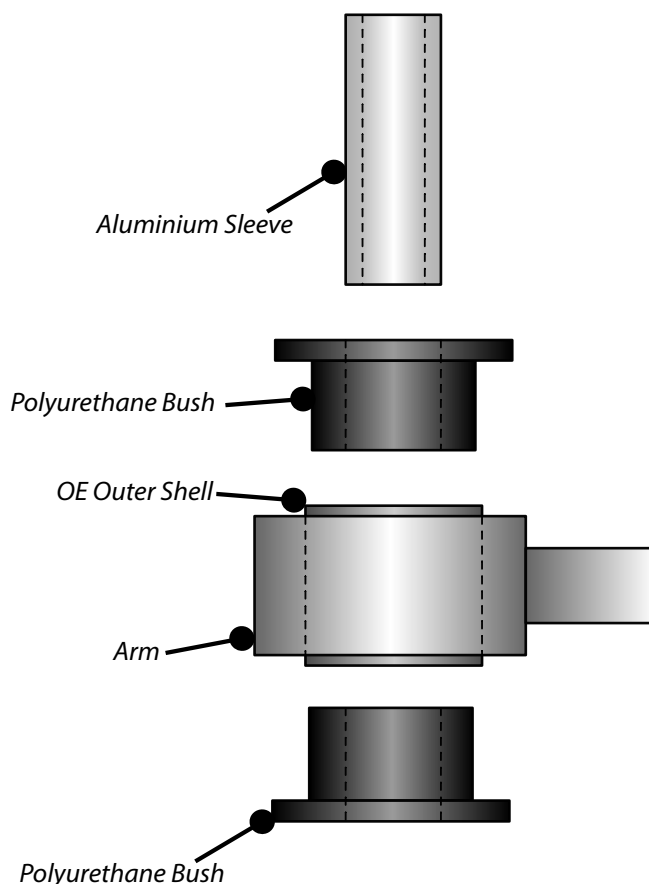


Figure 1