

# POWERFLEX®

PART NUMBER

**PFF69-702**

DESCRIPTION

**FRONT WISHBONE REAR BUSH**

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes

2 x Stainless Steel Sleeves

4 x Mild Steel Washers

1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the original bush from the arm and clean any dirt and corrosion from the bore in the arm.
2. Insert the polyurethane bush into arm with the lip labelled top sitting on the topside of the arm (facing upwards on the car) as shown in figure 1.
3. Apply the powerflex grease to the bore of the bush.
4. Insert stainless steel sleeve into the bore of the polyurethane bush.
5. Place a washer either side of the bushing and reattach to car.
6. Once arm is refitted, tension all hardware to manufacturers recommended torque settings.

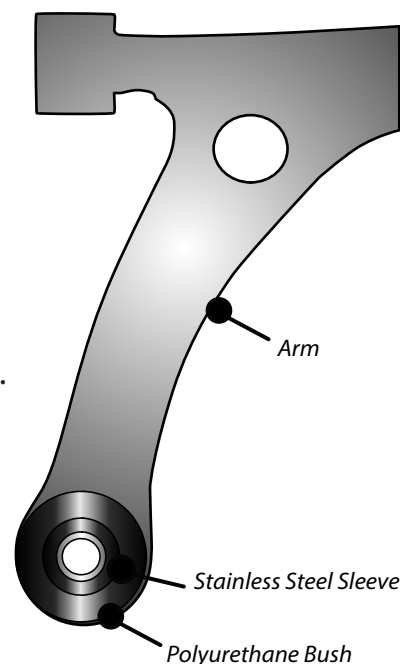


Figure 2

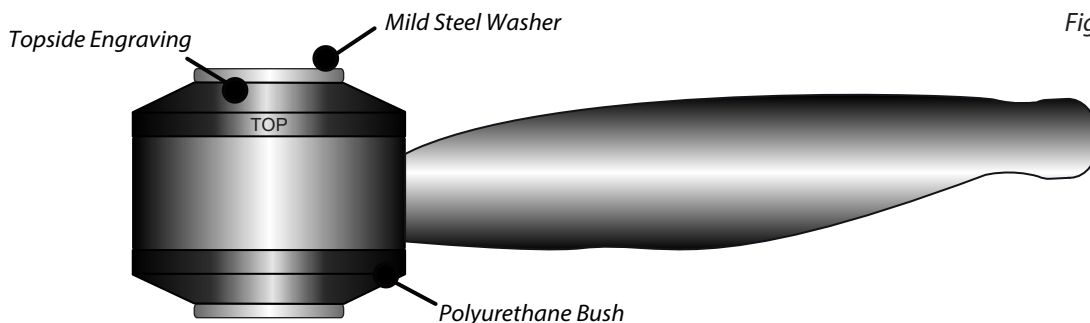


Figure 1