

### INSTALLATION GUIDE

#### Contents (parts per pack):

2 x Polyurethane bushes                      2 x Washers  
2 x Stainless steel sleeves                  1 x Grease

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
  - all safety precautions adhered to;*
  - wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

#### Fitting Instructions:

1. Remove the original bush from the arm.
2. Clean any dirt and corrosion from the bore in the arm.
3. Insert the polyurethane bush into arm with the shorter lip face on the top side of the arm (facing upwards on the car) as shown in figure 1. Make sure the bush voids are positioned in line with arm, as shown in figure 2.

*Tip: insert the bush into the arm at an angle so one part of the lip is already on bore.*

4. Apply the supplied grease to the bore of the bush.
5. Insert stainless steel sleeve into polyurethane bush.
7. Insert washer on top side of the bush (on shorter lip face).
6. Refit arm. Tension all hardware to manufacturers recommended torque settings.

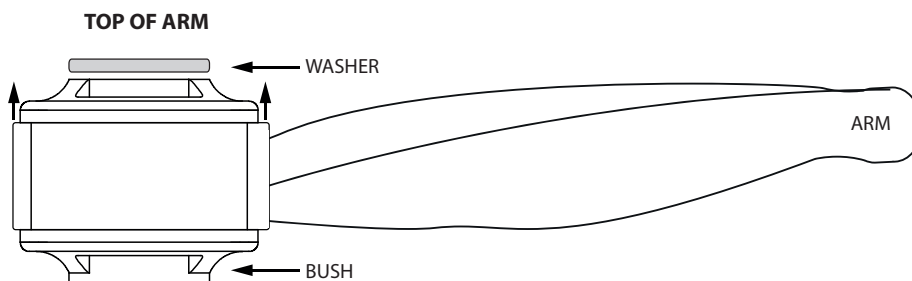


Figure 1

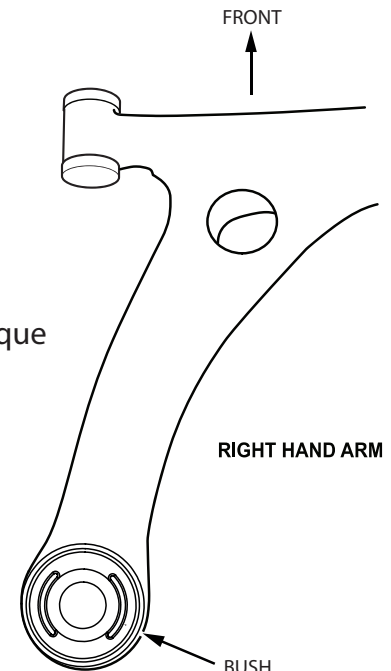


Figure 2