

POWERFLEX®

PART NUMBER

PFF75K-301

DESCRIPTION

FRONT LOWER LATERAL LINK INC BUSH KIT

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Arms Fitted With Bushes and Sleeves
- 4 x Mild Steel Washers
- 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original wishbone.
2. Place the smaller stainless steel spacer washers on each side of the bearing in the outer bush position (lower shock bush). (see fig. 1)
3. Refit the arm to the vehicle and tension all hardware to the manufacturers recommended torque settings.

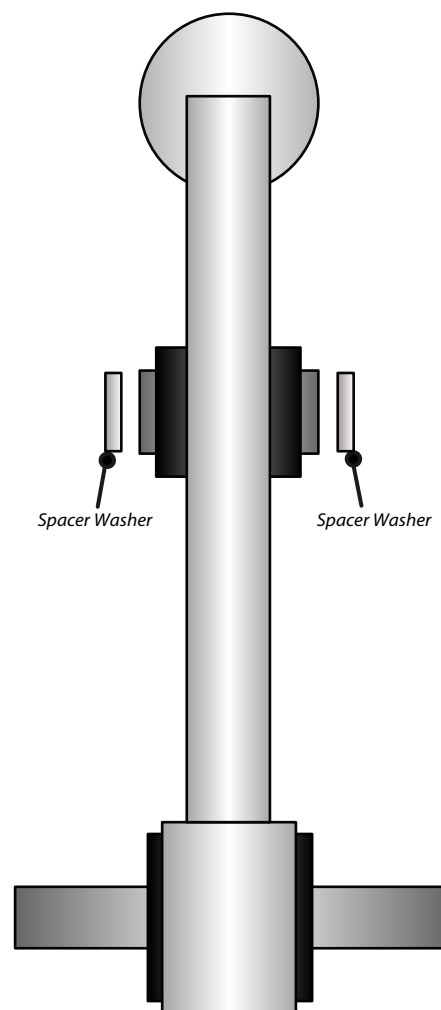


Figure 1