

POWERFLEX®

PART NUMBER

PFF75K-504G

DESCRIPTION

FRONT UPPER CONTROL ARM

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|--|--------------------------|
| 1 x Left Arm Fitted With Bushes | 1 x 34AF Spanner |
| 1 x Right Arm Fitted With Bushes | 4 x Mild Steel Washers |
| 4 x Adjustable Stainless Steel Sleeves | 1 x PTFE/Silicone Grease |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original wishbone from the arm.
2. Apply the supplied grease to the knurled bore and end faces of the polyurethane bushes, and insert the camber adjustable stainless steel sleeves facing the outside of the arm (see fig. 2).
3. Place the mild steel washer on the bush face towards the inside of the arm lining up the flats with end of the sleeve.
4. Refit the arm to the vehicle, carry out alignment check and adjust to set desired geometry (see fig. 1). It is recommended to adjust both bushes simultaneously.
5. Tension all hardware to the manufacturer recommended torque settings.

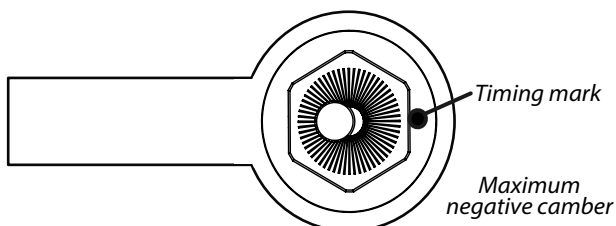
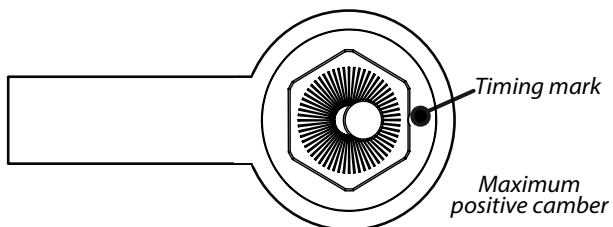


Figure 1

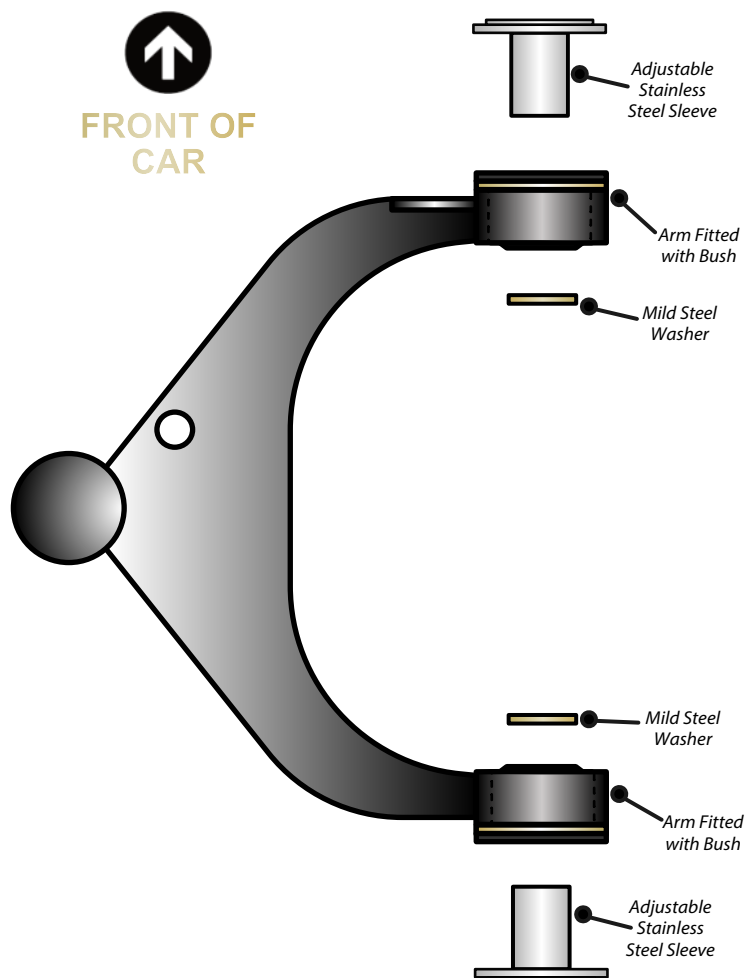


Figure 2