

POWERFLEX®

PART NUMBER

PFF76-603

DESCRIPTION

FRONT LOWER WISHBONE REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane A Bushes 1 x PTFE/Silicone Grease
2 x Polyurethane B Bushes 2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the original bush from the lower wishbone including its outer shell.
2. Clean any dirt and corrosion from the arm and the inside of the chassis mounting point, and file off any sharp edges with a rounded file.
3. Fit the thicker flanged A bush from the outside of the wishbone.
4. Fit the thinner flanged B bush from the inside of the wishbone.
5. Apply some of the supplied grease to the bore and end faces of the bush and insert the stainless steel sleeve until flush.
6. Refit the wishbone back to the vehicle and tension all hardware to the manufacturers recommended torque settings.

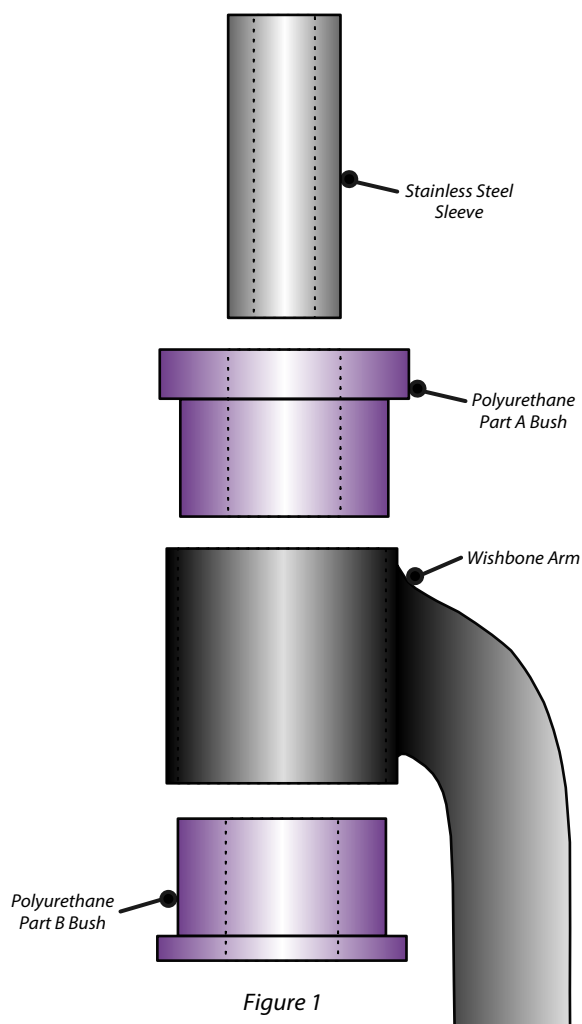


Figure 1