

POWERFLEX®

PART NUMBER

PFF80-1201

DESCRIPTION

FRONT LOWER ARM - FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane A Bushes 1 x PTFE/Silicone Grease
2 x Polyurethane B Bushes 2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove front lower arm from the car.
2. Remove the original rubber bush from the arm and clean any dirt or corrosion from the hole.
3. Push both polyurethane bushes into the arm.
4. The Polyurethane A bush has a narrower top section and fits in from the front of the arm. The B bush has a thicker top section and fits in from the rear of the arm.
5. Apply some of the supplied grease to the bore and end faces of the bushes.
6. Insert the stainless steel sleeve through the bush.
7. Refit the arm to the car and tension all hardware to manufacturers recommended torque settings.

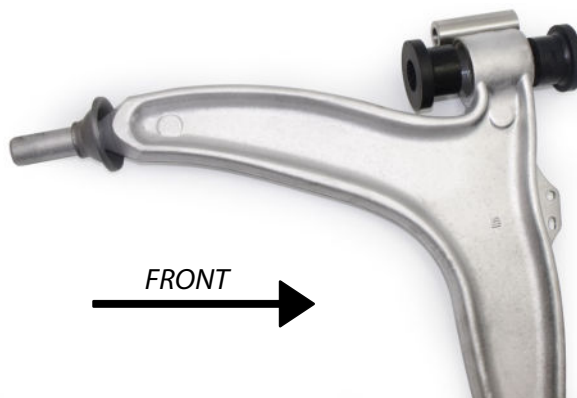


Figure 1