

# POWERFLEX®

## PART NUMBER

# PFF85-1102

## DESCRIPTION

## FRONT LOWER ARM REAR BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

4 x Polyurethane Bushes      1 x PTFE/Silicone Grease  
2 x Stainless Steel Sleeves      2 x Anodised Outer Shells

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



### Fitting Instructions:

1. Remove the lower arm from the vehicle.
2. Remove the original rear bush from the arm. There may be a lot of corrosion in the hole due to the dissimilar metals. This needs to be thoroughly cleaned to enable correct fitment of the outer shells.
3. Press the shell in from the rear tapered face of the arm until the taper on the shell stops on the taper of the arm.
4. Fit the bushes into the shell, apply some of the supplied grease to the bore of the bushes and the outside of the sleeve. Push the sleeve into the bush.
5. Refit the arm back onto the vehicle and tension all hardware to manufacturer's recommended torque settings.

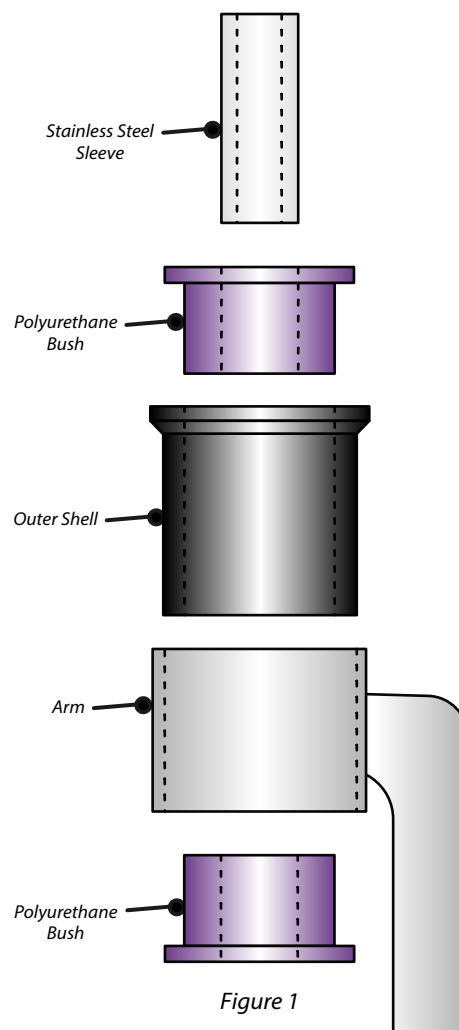


Figure 1