

POWERFLEX®

PART NUMBER

PFF85-532

DESCRIPTION

UPPER ENGINE MOUNT INSERT

INSTALLATION GUIDE

Contents (parts per pack):

1 x Part A Polyurethane Insert 1 x Grease

1 x Part B Polyurethane Insert

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Support the engine from the bottom of the car and remove the upper engine mount.
2. Clean any dirt or corrosion and remove any flash lines from the voids of the mount.
3. Fit Part B into the top voids closer to the mounting bracket and lock the pins of Part B into the pin holes on Part A to secure the two together (Figure 1).
4. Re-fit the upper engine mount to the vehicle.
5. Tension all hardware to manufacturers recommended torque settings.

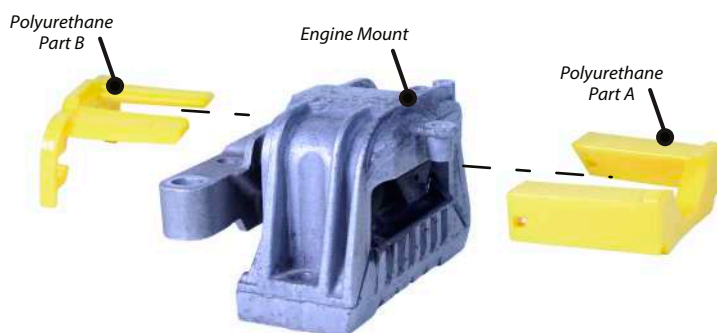


Figure 1 - exploded diagram showing how to fit polyurethane parts in engine mount

PFF85-532 FITS UPPER ENGINE MOUNT WITH THIS PROFILE ONLY

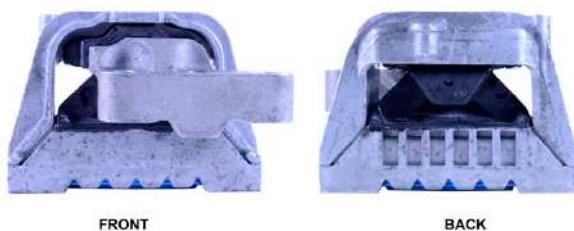


Figure 3 - profile of the Upper engine mount that uses this insert.

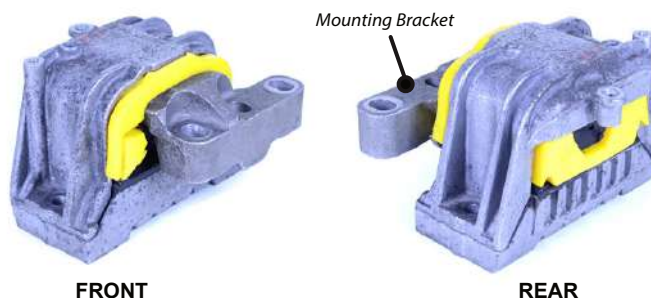


Figure 2 - showing how part A and part B lock into each other in the engine mount