

PART NUMBER

**PFF85-803\***

DESCRIPTION

FRONT ANTI-ROLL BAR BUSH

## INSTALLATION GUIDE

### **\*Note:**

Please check anti-roll bar diameter size for correct bush sizing.  
Sizes available: 21.7mm, 23.2mm, 24mm & 25mm.

### **Product description:**

This part replaces OEM part numbers 5Q0411303L, 5Q411303M, 5Q411303N, 5Q411303AB.

### **Contents (parts per pack):**

2 x Polyurethane Bushes

1 x Grease

*Please read the complete fitting instructions and check package components before fitment.  
These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
  - all safety precautions adhered to;*
  - wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

### **Fitting Instructions:**

1. Remove the front anti roll bar from the car.
2. Secure the bar firmly on a vice and slowly drill away the swaged section from the bottom of the brackets to separate the brackets from the bush and the anti-roll bar.  
Note: DO NOT drill into the brackets more than required. Fig A.
3. Remove the rubber bushes. Clean any dirt and corrosion from the brackets and the anti-roll bar.
4. Fit the new PU bushes on the bar. Re-fit the brackets on the bushes Fig B.
5. Fit back anti roll bar to the car. Tension all hardware to manufacturers recommended torque settings.



Fig A.

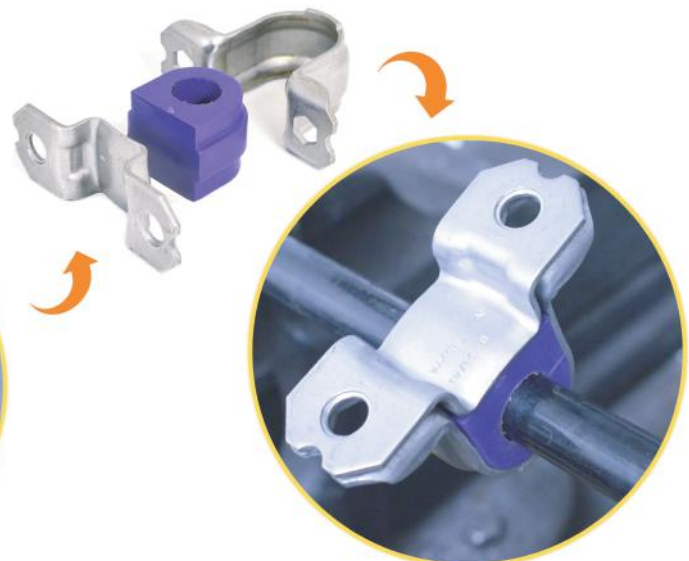


Fig B.