

# POWERFLEX®

## PART NUMBER

# PFF88-1002

## DESCRIPTION

# FRONT WISHBONE REAR BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes      2 x Mild Steel Outer Shells  
2 x Stainless Steel Sleeves      4 x Washers  
1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the original rubber bush from the wishbone, including its outer shell.
2. Clean any dirt and corrosion from the bore in the arm, using a rounded file to remove any burrs or sharp edges.
3. Press the outer shell in from the top of the arm as shown in Fig 1. Start with the leading edge and ensure that the shell is pressed in square to the arm.
4. Press the bush into the bore of the outer shell.

**Tip: Apply some washing-up liquid to the outside of the bush to make it easier to press into the shell.**

5. Apply some of the supplied grease to the bore of the bush and press in the stainless steel sleeve until flush.

6. Prior to presenting the wishbone to the vehicle for re-assembly, add one of each of the supplied washers to the top and bottom of the bush. A small smear of grease can be used between the bush face and washer.

7. Refit the wishbone to the vehicle and tension all hardware to the manufacturer's recommended torque settings.

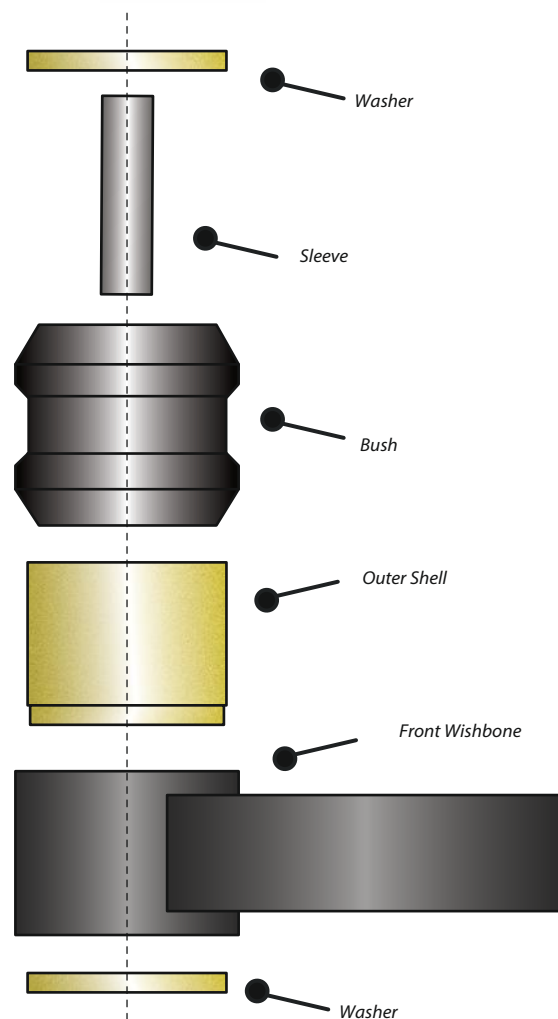


Figure 1