

POWERFLEX®

PART NUMBER

PFR1-608

DESCRIPTION

Rear Trailing Arm to Chassis Bush

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease

2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.


It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.




Fitting Instructions:


1. Remove the original rubber bush from its outer shell within the arm. This will require the bush to be cut or burned out. Our bush utilises the OE outer shell, so please DO NOT remove this from the arm.
2. Once the rubber is removed, clean away any dirt and corrosion to ensure a smooth housing surface.
3. Push the bushes into either side of the outer shell.
4. Apply some of the supplied grease to the bore of the bush and push in the sleeve.
5. Re-fit the arm to the vehicle. Tighten all hardware to the manufacturers recommended torque settings.

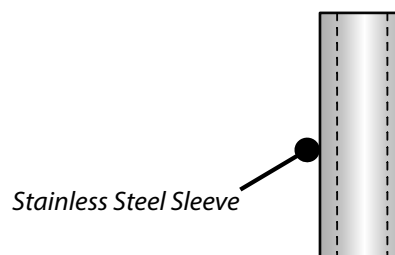

Stainless Steel Sleeve

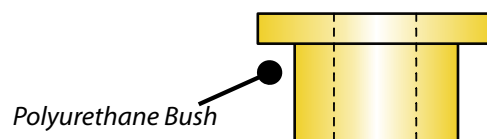


Polyurethane Bush

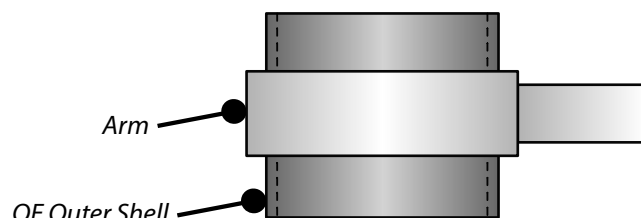

Arm

OE Outer Shell

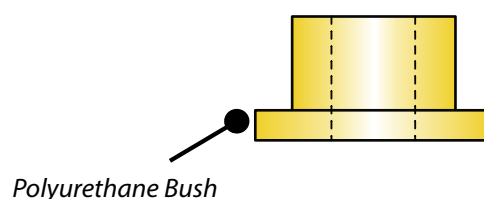

Polyurethane Bush

Figure 1