



PART NUMBER

PFR12-710

DESCRIPTION

REAR BEAM BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane Bushes
- 1 x PTFE/Silicone Grease
- 2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Access the rear beam and remove the original rubber bushes.
2. Clean any dirt and corrosion from the bore in the arm and file off any sharp edges from the bore of the arm.
3. Insert the polyurethane bush into the rear beam, as shown in Figure 1, with the large diameter facing towards the outside of the car.
4. Apply some of the supplied grease into the bore of the polyurethane bush and press in the stainless steel sleeve into the bore of the bush.
5. Re-fit the rear beam back onto the vehicle and tension all hardware to manufacturers recommended torque settings.

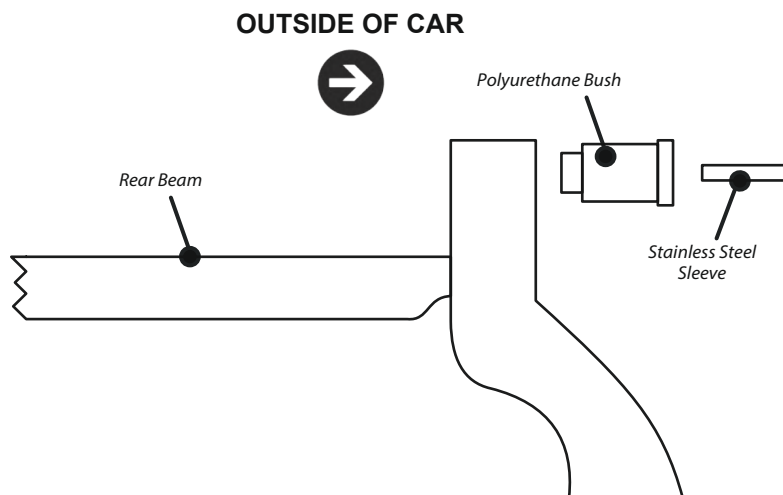


Figure 1 - how the polyurethane bush fits in the rear beam (top view)