

# POWERFLEX®

PART NUMBER  
**PFR3-107**

DESCRIPTION  
AUDI 80-90 COUPE QUATTRO REAR DIFF  
MOUNT BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bush    1 x Stainless Steel Sleeve  
1 x Powerflex Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove attachments and press out the original bushing, removing any dirt, corrosion or sharp edges.
2. Push in the supplied bushings to either side of the mount, ensuring that lip sits flush. Ensure the lip sits flush to the surface of the mount. Some models feature a chamfer on the inner side of the mount (shown in Figure 2 and 3), the lip should not sit on this.
3. Apply grease to the bore of the bushing and press the sleeve into the bore of the bushing.
4. Re-fit part to vehicle and tighten any fasteners to manufacturers torque settings.



Figure 1

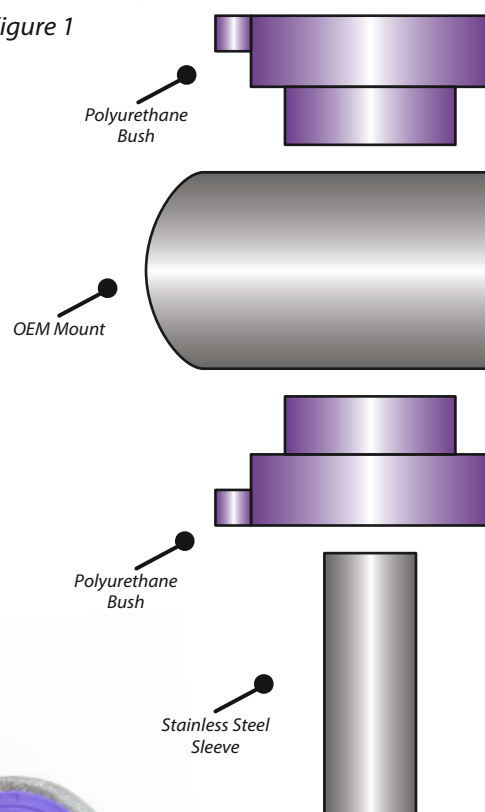


Figure 2



Figure 3

Lip of bushing avoids chamfer, please not this feature may not be present on some vehicles.

