

POWERFLEX®

PART NUMBER

PFR3-111

DESCRIPTION

REAR BEAM FRONT LOCATION BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original rubber bush from the rear beam.
2. Clean any dirt and corrosion from the bore of the rear beam and file off any sharp edges.
3. Push in the polyurethane bush into the bore of the rear beam, with the larger diameter lip being pushed in towards the inside of the car, as shown in Figure 1.
4. Apply some of the supplied grease into the bore of the polyurethane bush and press the stainless steel sleeve into the bore of the bush till it is flush.
5. Re-fit the rear beam onto the vehicle and tension all hardware to manufacturers recommended torque settings.

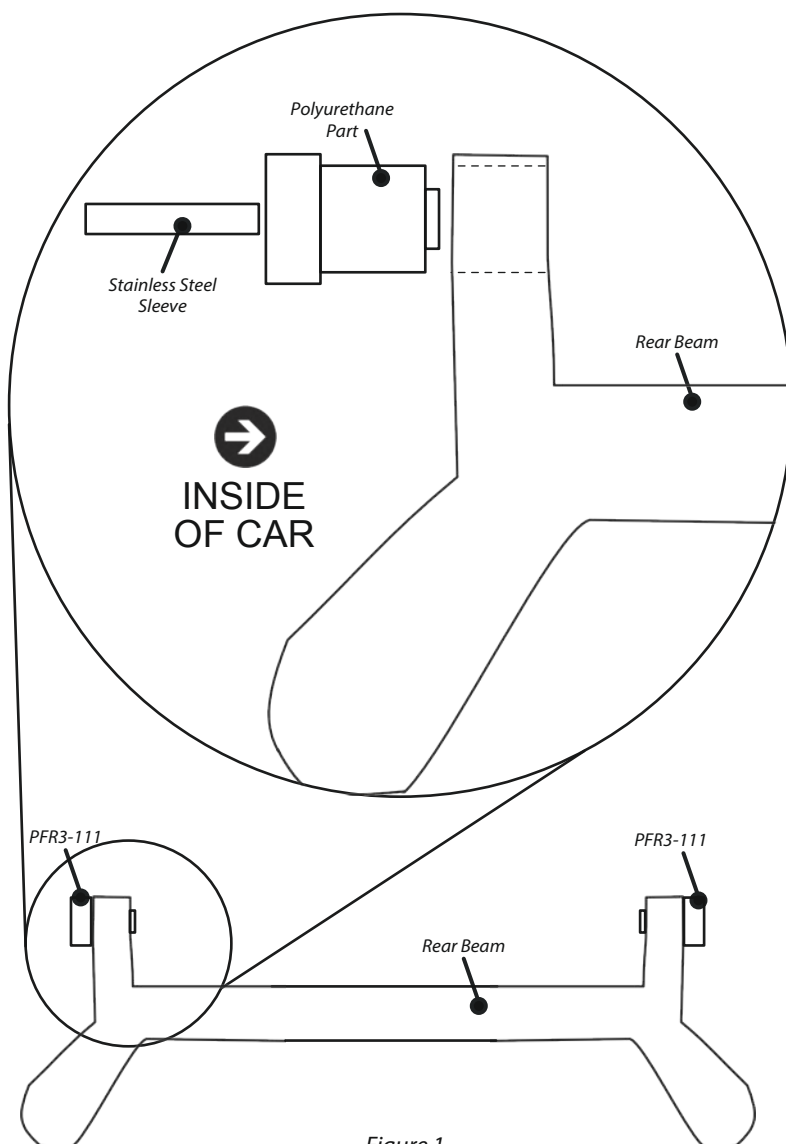


Figure 1