

POWERFLEX®

PART NUMBER

PFR5-725

DESCRIPTION

REAR DIFF FRONT MOUNTING BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x bushes
- 2 x stainless steel sleeves
- 2 x washers
- 1 x grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.


It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*

All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove both front diff mounting bolts and lower the diff to allow access to the bushes, remove the original bushes from the subframe. Clean any dirt or corrosion from the bore in the subframe and the mounting face of the diff.
2. The larger diameter of the new bush fits against the diff. Fit the new bush into the subframe with the larger diameter towards the back of the car. Apply some of the supplied grease to the bore and end faces of the bush.
3. Push the sleeve into the bush so the end is flush with the lower face at the diff end.
4. Raise the diff back into position, place the new metal washers onto the bolts then refit.

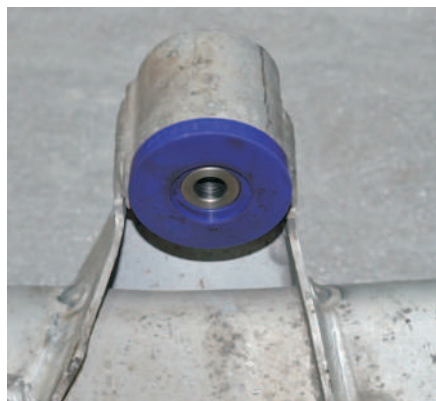

VIEW FROM BACK OF CAR



VIEW FROM FRONT