

POWERFLEX®

PART NUMBER

PFR50-300

DESCRIPTION

REAR BEAM MOUNT TENSIONING KIT

INSTALLATION GUIDE

Contents (parts per pack):

- 4 x Polyurethane Bushes
- 4 x Zinc Plated Self-Tapping Screws

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the rear beam tensioning kit from the car, keeping the original bolt.
2. Clean any dirt from the voids of the original bush.
3. Insert the polyurethane part into the void on the side of the original bush until it sits flush inside the bush.
4. Fasten the screw through the bush and into the insert, from the nearest surface to the insert as shown in Figure 1. This will hold the insert in place.
5. Refit the rear beam mount tensioning kit to the car and tension all hardware to manufacturers recommended torque settings.

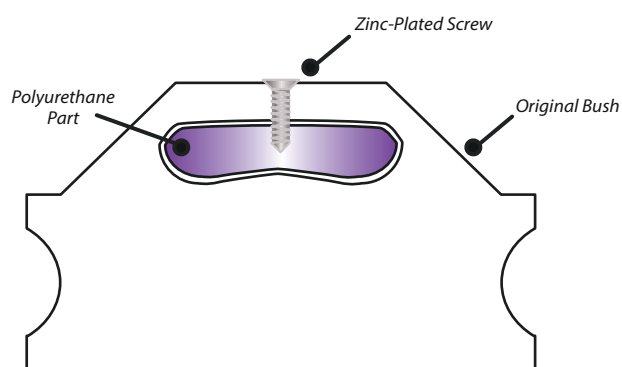


Figure 1