



PART NUMBER

PFR68-108

DESCRIPTION

REAR CONTROL ARM INNER BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane bushes

2 x Stainless steel sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the original bush from its outer shell.

This can be done by cutting out the bush or burning it. If burning, please ensure it is done in a controlled manner and well-ventilated area.

Please DO NOT remove the outer shell from the arm as our bush requires this for the installation.

2. Clean any dirt and corrosion from the outer shell and remove any sharp edges or burrs with a rounded file.

3. Insert the polyurethane bush into the arm with the flange facing the rear of the vehicle as shown in Fig 1.

4. Apply some of the supplied grease to the bore of the bush and insert the stainless steel sleeve.

5. Refit the arm to the vehicle and tension all hardware to the manufacturer's recommended torque settings.

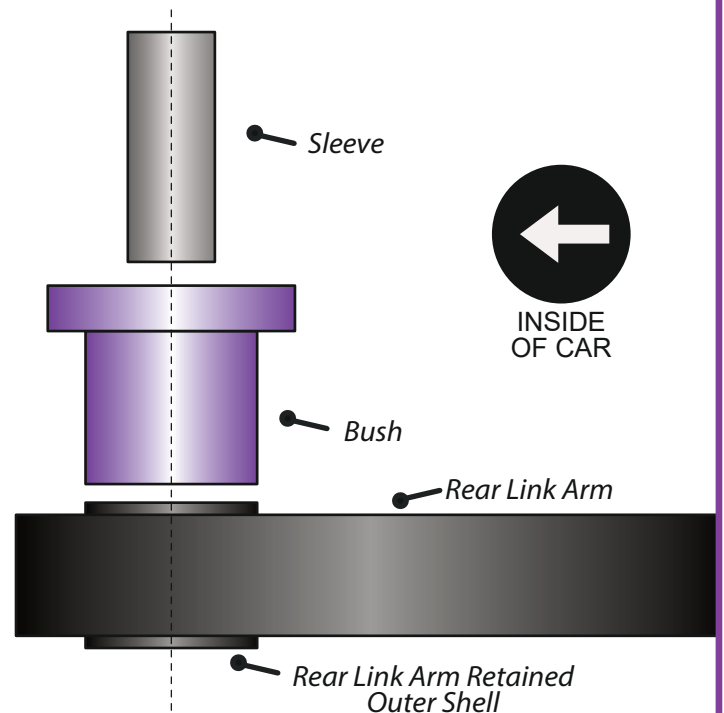


Figure 1